


1. Introduction

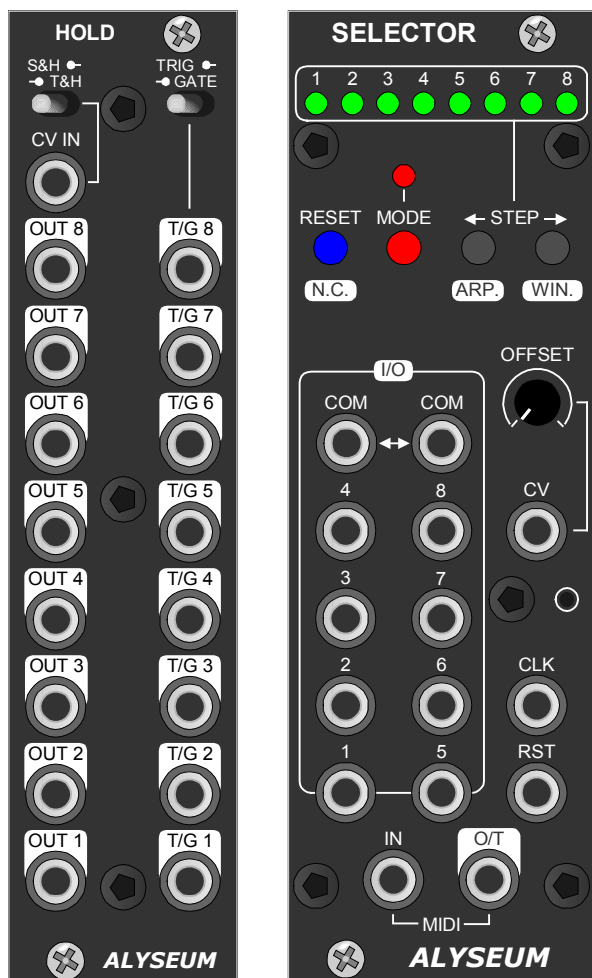

SELECTOR is an analogue selector that is probably the most versatile in terms of connectivity, control and expansion in the modular world!

Its front panel, combined with a multitude of control signals, sets it apart from other sequencer switchers.

The heart of the module is a high Voltage and high quality bi-directional addressed Selector $8 \leftrightarrow 1$, also called Sequential switcher $8 \leftrightarrow 1$ or Multiplexer $8 \rightarrow 1$ or Demultiplexer $1 \rightarrow 8$.

Up to 8 **SELECTOR** modules can be chained to create a bigger Selector up to $64 \leftrightarrow 1$.

In every cases, only one Switcher is active at a time!

By using the **SELECTOR** as a **MATRIX II** slave module, you can freely expand **MATRIX II**:

- For each of its 15 inputs, 8 sources.
- For each of its 16 outputs, 8 destinations.

The **HOLD** module is an optional **SELECTOR** module's companion which adds the features to it:

- 8 digital addressed outputs, selectable between Trigger or Gate.
- 1 CV input to 8 analog addressed outputs, selectable between S&H or T&H.

The 8 digital and 8 analogue outputs are synchronized with the **SELECTOR** I/O.

Modes, features and chaining of the **SELECTOR** module are fully preserved when the **HOLD** module is added!

These modules can be controlled in 8 different modes of wich 5 exclusive:

- 1 Standalone by buttons.
- 2 Slave of the **MATRIX II** module linked to its preset and bank management.
- 3 CV Input with its bipolar offset setting.
- 4 MIDI NOTE or MIDI CC input.
- 5 Sequential switcher with a MIDI CLK input.
- 6 Sequential Switcher with a CLK/Trigger input.
- 7 Sequential Switcher with a CLK/Trigger + RST inputs.
- 8 CV & CLK/Trigger Inputs, like S&H

Two unique features increase the power of the different modes and their usabilities:

- An "Arpeggiator-like" function is available for the Modes **5**, **6** and **7** and including 4 patterns.
- A "Steps Window" function is available for the Modes **3** until **8** and allows you to freely choose a range of steps in number and location on the fly.

2. Hardware

2.1. SELECTOR - Package Content

- One SELECTOR module.
- One pouch containing two M3 screws + two nylon washers + one 10/16 pins power ribbon cable + two short MIDI cables, one stereo Jack/Jack and one DIN5 female/Jack (type B).
- Warranty & user manual access card.

2.2. HOLD - Package Content

- One HOLD module.
- One pouch containing two M3 screws + two nylon washers.
- Warranty & user manual access card.

2.3. Specifications

- High voltage and high quality chip type: DG408.
- Front panel width of 8HP for SELECTOR and 6HP for HOLD, modules maximum depth: 26 mm.
- Power requirements for SELECTOR (Full LED On) : $+12V = 55\text{ mA}$ $-12V = 2\text{mA}$.
- Power requirements for SELECTOR + HOLD (Full LED On): $+12V = 60\text{ mA}$ $-12V = 4\text{mA}$.
- Power supply is protected against reverse ribbon cable insertion.

2.4. SELECTOR - Installation

Carefully choose a stable location for your Eurorack, avoiding vibration, dust, heat sources, humidity or rain.

SELECTOR and HOLD can only be used in a Eurorack synthesizer with an A-100 power supply.

During the entire installation procedure, always switch off your Eurorack.

Make sure that the red band on the flat power cable is correctly positioned at -12 Volts.

Installation for chaining

For order to use the chaining feature, install the module #1 on the left first and then the module #2 on the right and so on. Thus you visually respected the LED chaining!

When install both SELECTOR & HOLD in chain, place always per pairs HOLD-SELECTOR + HOLD-SELECTOR +

Installation with the MATRIX II:

- SELECTOR modules must be powered by the same power supply, or generally powered ON/OFF simultaneously with the MATRIX II.
- The MIDI Out of the MATRIX II module must be connected to the MIDI Input of the SELECTOR module.


NB : We use a very high speed optocoupler with only 120nS delay. The goal is to be able to cascade a large number of modules without adding a delay on the MIDI. the use of a THRU BOX to avoid any delay is totally useless.

2.5. HOLD - Installation

Power and data is connected to the SELECTOR module by a single 8-contact polarized ribbon cable.

Always install the HOLD module to the left of the SELECTOR module in your Eurocase.

Plug the 8-pins header connector as shown in the photo below.

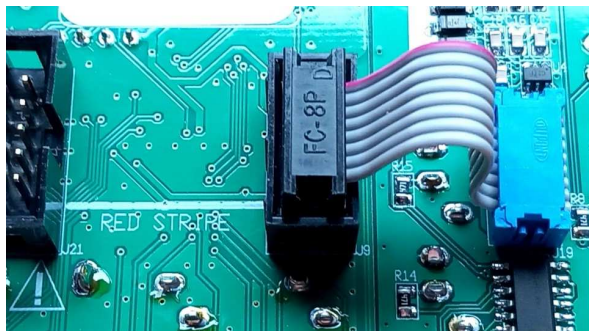

ATTENTION

For modules with a serial number in the 033-xxx range, the screen-printed labels OUT 1 to OUT 8 and T/G 1 to T/G 8 on the front panel of the HOLD module are reversed.

The numbers start with 1 at the bottom, as on the SELECTOR, and end with 8 at the top.

We will manufacture additional front panels during the next production run and provide them free of charge to all HOLD module owners.

Three screws must be removed to replace the aforementioned front panel.

IMPORTANT

Older SELECTOR modules with serial numbers lower than 031-xxx do not include the expansion connector for the HOLD module.

If you already own a SELECTOR module, please verify before purchasing that your module has a serial number of 031-xxx or higher.

2.6. SELECTOR - Cabling

External controls according to selected mode.

- ① : nothing
- ② ④ ⑤ : MIDI in
- ③ : CV in
- ⑥ : CLK in
- ⑦ : CLK in + RST in
- ⑧ : CV in + CLK in

NB : In case of chaining, connect MIDI in, CV, CLK and RST signals only on the module #1 (The Master).

I/O & COM

You have 2 possibilities:


1. Use COMs as an output, if you consider 1 to 8 inputs.
2. Use COM as an input, if you consider 1 to 8 outputs.

COM - In case of chaining use

All SELECTOR modules need to be bridged together, leaving two free jacks at the ends for your own use.

MIDI - with the MATRIX II

To guarantee the management of the Banks and Presets of the SELECTOR, it is important to wire the MIDI as shown below. The principle is simple, MATRIX II is the master, SELECTOR are slaves.

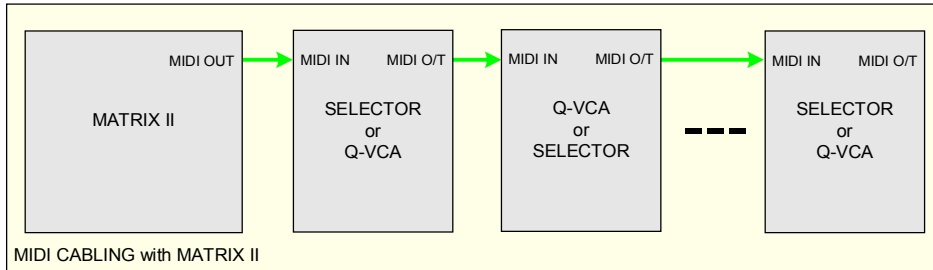

2.7. Good to know

SELECTOR - SYNC switching timing?

To avoid unwanted sound effects as much as possible, it is important that the two switches that change states (one from ON to OFF and the other from OFF to ON) are synchronized to avoid both being closed at the same time or opened together.

Three possible cases:

1. The change between the two switch is limited to the same/single module. There, the DG408 is by nature: Break-before-make switching action.
2. The change between the two switches which one is in the master module and the other in a slave module.
3. The change between the two switches which are each in a different slave modules.

Software countermeasures are taken to simulate the DG408 in the cases 2 and 3.

HOLD - S&H vs T&H?

The difference between a S&H capture and a T&H capture is the duration of sampling in relation to the duration of the activation period:

- S&H or Sample & Hold = the first 2mS. of the entire period of the activation period.
- T&H or Track & Hold = Throughout the entire activation period.

HOLD - Trigger vs Gate?

The difference between Trigger and Gate during activation of a digital output is:

- Trigger= At the start of the active period, the output remains active for 2 mS
- Gate= The output remains active for the entire activity period.

Finally, Trigger is a very short Gate and Gate is a very long Trigger ☺

3. How to use

3.1. Initialization Sequence

1. Turn the Eurorack case power ON.
2. All LEDs light up one after the other from right to left and finishing by the LED red MODE.
3. Module Address saved in the EEPROM is loaded and the corresponding green LED flashing 1 second.
4. Last mode saved in the EEPROM is loaded:
5. The SELECTOR module(s) is (are) ready!

If you want to use a single module (no chaining), you can go directly to the chapter 3.3.

3.2. Rules in case of use in chaining.

- Use only the buttons and CV Offset of the module #1 (the Master).
- Connect the external CV, CLK, RST and MIDI signals only on the module #1 (the Master).
- The next modules (the Slaves) buttons, CV OFFSET, Jack control and Red LED MODE are inoperable!
- All data are save in EEPROM of the module #1 (the Master).
- Except Module #1, all Slaves modules are automatically in MIDI THRU

Assign # addresses for chaining:

It is important that all modules in the chain are installed, powered and that MIDI is wired in loop!

- Turn OFF your system.
- Keep press gently the button RST of the first module (The one you want to give the address #1, and logically installed at the left in your case).
- Turn ON your system and the 8 green LEDs blink 2 times, now release the button RESET.
- Then, the first module will programmed automatically the address #2 of the second module whose the 8 green LEDs blink 2 times to indicate that the module is programmed, and so on until the last of the chain. All modules restart.
- Address module saved in the EEPROM is loaded and the corresponding green LED flashing 1 second.

NB 1 : Do not forget to remove the last MIDI cable from the loop after programming the addresses.

NB 2 : In the case of chaining, the master module automatically calculates the number of steps according to the number of modules in the chain.

Erase address from chaining:

- Turn OFF your case.
- Keep press the button MODE.
- Turn ON your case and the 8 green LEDs flash twice time, now release the RESET button.
- The module restart, and your SELECTOR is ready to work alone.

3.3. Mode selection

- Press the red button MODE more as 2 seconds, the red LED turn ON.
- Press several times the button MODE to obtain wished mode, the Mode selected turn ON green LED.


MODE & LED #	MODE	Arpeggiator-like pattern (3.4)	Step window (3.5)
①	Standalone (out of factory)	No	No
②	Use with the MATRIX II		
③	External CV		
④	External MIDI NOTE or MIDI CC command	Yes	Yes
⑤	External MIDI CLK command		
⑥	External CLK with programmable steps number		
⑦	External CLK + RST	No	
⑧	External CV + CLK - Like S&H or STROBE mode		

- Afterwards, press more as 2 seconds the button MODE to confirm your choice, the selected green LEDs flash 2 times to confirm the mode is saved in the EEPROM - OR - To cancel this operation, briefly press the RESET button - OR - Allow 15 seconds to elapse, red LED MODE turn OFF.

3.4. Mode ① - Standalone

Press button STEP ← or STEP → (see figure below), switch is updated.

Keep press button STEP ← or STEP → more as 1 second to engage the auto-repeat, during auto-repeat, switch is not updated.

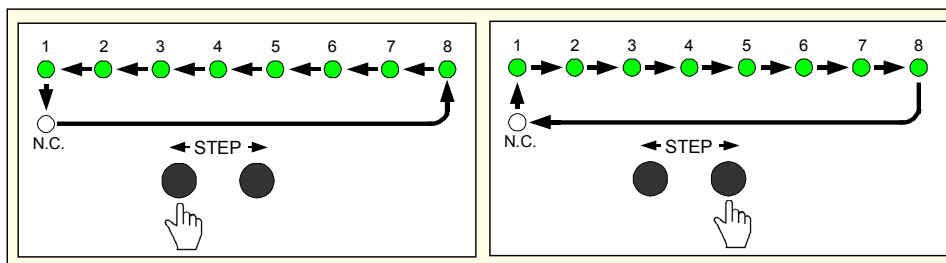

In resume:

- With a single module, existing 8 steps and a ninth state when all the LEDs are OFF for No Connection (N.C.)
- With 2 modules in chaining, existing 16 steps and a seventeenth state when all the LEDs are OFF for No Connection (N.C.)
-
- With 8 modules in chaining, existing 64 steps and a sixty-fifth state when all the LEDs are OFF for No Connection (N.C.)

NB : Keep pressed the button RESET and the SELECTOR is held at No Connection and the last active LED flashes.

3.5. Mode ② - Controlled by MATRIX II

Same as Mode 1, but with the possibility to save and recall 7 banks of 32 presets via the MATRIX II front panel.

The current Bank & Preset number are saved or loaded and displayed also via the front panel of the MATRIX II, but the values are saved inside the SELECTOR module.

Please, read the user Manual of the MATRIX II to load and save Bank & Preset.

- A LOAD operation, recalls the settings of the SELECTOR + Link to the Bank & Preset number displayed by the MATRIX II.
- A SAVE operation, saves the settings of the SELECTOR + Link to the Bank & Preset number displayed by the MATRIX II.

During SAVE & LOAD operations, green & red LED blink one time.

NB 1 : The current Preset # is saved or loaded and displayed via the front panel of the MATRIX II, but the values are saved in the EEPROM of the SELECTOR (Master) module.

NB 2 : Keep pressed the button RESET and the SELECTOR is held at No Connection and the last active LED flashes.

MIDI SYS-EX.

These commands are generated by the MATRIX II, of course, if you will control the SELECTOR by any software, welcome!

Commands SYS EX	HEX= Header + ID Device + Command # + Data + End
Load a Bank & Preset	F0 00 20 09 00 1F 00 XX YY F7 (XX= Bank= 00 to 06 - YY=PRESE T= 00 to 1F)
Save a Bank & Preset	F0 00 20 09 00 1F 01 XX YY F7 (XX=BANK= 00 to 06 - YY= PRESET=00 to 1F)

3.6. Mode ③ – Controlled by an external CV.

There is the ability to control SELECTOR module by an external CV signal (0 to 5 Volts).

Use the bipolar OFFSET adjust for a compatibility with your source down to -5 Volts.

	Single module	Chaining modules						
Module #	1	2	3	4	5	6	7	8
Steps #	8	16	24	32	40	48	56	64
V/Step	0.7V	0.33V	0.22V	0.16V	0.13V	0.11V	0.09V	0.08V

NB 1 : The division factor of the input voltage is calculated to the nearest step when the STEPS WINDOW are activated.

NB 2 : Keep pressed the button RESET and the SELECTOR is held at No Connection and the last active LED flashes.

3.7. Mode ④ - Controlled by an external MIDI NOTE or MIDI CC.

In Mode 4, two categories of MIDI messages can be used, but only one at a time.

1. MIDI NOTE, where each module represents an 8-notes zone
2. MIDI CC, where The 128 values automatically distributed over 1 or multiple modules if chaining.

NB : Keep pressed the button RESET and the SELECTOR is held at No Connection and the last active LED flashes.

Programming MIDI command

Only programmable if the SELECTOR Module is configured in Mode 4.

Connect an external MIDI Keyboard or controller device on the MIDI input.

- Press the button STEP ← more as 2 seconds, the red LED MODE blink.
- Afterwards, the first MIDI Note On or the first MIDI CC detected by the SELECTOR is saved (MIDI Channel sensitive). The 8 green LED flash 2 times to confirm - OR - To cancel this operation, briefly press the RESET button - OR - Allow 15 seconds to elapse
- The red LED MODE stop to blinking.

3.8. Mode 5 - Controlled by an external MIDI CLK.

There is the ability to control SELECTOR module by a MIDI sequencer or any software.

Some info about MIDI CLK (System Real-Time Messages) https://en.wikipedia.org/wiki/MIDI_beat_clock

Hex	Condition	Comments
F8	Timing CLK	Sent 6 times per MIDI beat (BPM)
FA	Start	From beginning
FB	Continue	From Stop position
FC	Stop	Stop song's execution
FF	Reset	Return to the first Step

NB : Keep pressed the button RESET and the SELECTOR is held at No Connection and the last active LED flashes.

3.9. Mode 6 - Controlled by a single CLK input.

Each CLK pulse increments the SELECTOR of one Step, within the programmed number of steps, and repeats indefinitely the cycle.

NB 1 : Briefly press the RESET button, then repeat the sequence from the beginning.

NB 2 : Hold down the RESET button to freeze the sequence.

3.10. Mode 7 - Controlled by the CLK + RST Inputs.

Same as MODE 6, but here we use an external RST.

You can connect directly a sequencer to the SELECTOR module.

Each CLK pulse increment the SELECTOR and a single RST Pulse and the SELECTOR go to the step #1.

NB 1 : Briefly press the RESET button, then repeat the sequence from the beginning.

NB 2 : Hold down the RESET button to freeze the sequence.

3.11. Mode 8 - Controlled by the CV & CLK Inputs - like S&H or STROBE mode

At each CLK pulse, the voltage at the CV input is frozen until the next CLK pulse.

NB : Keep pressed the button RESET and the SELECTOR is held at No Connection and the last active LED flashes.

3.12. "Arpeggiator-like" patterns

"Arpeggiator-like" patterns is available and programmable for the Modes 5, 6 & 7.

Arpeggiator-like patterns	Pattern #	Resulting Example play	LED
Up (loop)	--	1-2-3-4-1-2-3-4..... (no pattern)	1
Down (reversed loop)	1	4-3-2-1-4-3-2-1.....	2
Up & Down	2	1-2-3-4-4-3-2-1-1-2.....	3
Pendulum	3	1-2-3-4-3-2-1-2.....	4
Random	4	Any-any-any-any.....	5

Programming Arpeggiator-like pattern.

- Press the button STEP ←, more than 2 seconds, one of the 5 green LEDs of the arpeggio type turn ON.
- Press the buttons STEP ← or STEP →, to select the Arpeggiator-like pattern you want use.
- Afterwards, press more as 2 seconds the button STEP ← to save your choice - OR - To cancel this operation, briefly press the RESET button - OR - Allow 15 seconds to elapse.
- The green LEDs selected turn off.

3.13. Configurable "Steps Window"

"Steps Window" is available and programmable for the Modes 3 until 8.

The "Steps Window" function allows you to freely choose a range of steps in number (minimum 2) and location on the fly! In the case of chaining, the master module automatically calculates the number of steps available.

Programming the steps window

- Press the button STEP →, more than 2 seconds. Two green LEDs turn ON, these indicate the limit left & the limit right of the steps window.
- Press the button STEP ← or STEP →, to move the starting (left) point.
- Press the button MODE to switch to editing ending point of the steps window.
- Press the button STEP ← or STEP →, to move the ending (right) point.
- Afterwards, press more as 2 seconds the button MODE to save your choice - OR - To cancel this operation, briefly press the RESET button - OR - Allow 15 seconds (timeout) to elapse.
- The two green LEDs selected turn off.

NB : As soon as two LEDs are contiguous, you can continue to move starting and ending points together.

3.14. Firmware upgrade

The SELECTOR is pre-programmed (BOOT) to receive firmware updates (bug fixes, new features, etc.) via MIDI.

Please complete the Firmware Upgrade form at <https://alyseum.com/firmware.html> to be notified when a new firmware version becomes available.

Revision	Date	Comment
1.0	12-04-2017	First commercial release
1.1	05-08-2020	Add STROBE mode
1.2		Test
1.3	29-07-2026	Reverse data on the CV input

To install the new firmware, follow the steps below:

1. Close all MIDI software and disable Active Sensing messages on your computer.
2. Connect your computer to the SELECTOR using a MIDI cable.
3. Turn Off your Eurorack system.
4. Using a thin object such as a toothpick, press and hold the BOOT button located behind the small access hole between the CV and CLK jacks.
5. Turn On your Eurorack system.
6. The Mode LED will blink three times. Release the BOOT button.
7. Download the C6 or Transfer utility from Elektron (Windows & macOS) from <https://alyseum.com/firmware.html>

8. Launch the application, click Load, select the new firmware file, then click Open.
9. Click Configure, select your MIDI Out port, set Delay to 400 ms, set Turbo Limit to x1, then click OK.
10. Click Send. The Mode LED will blink while the firmware is being transferred.
11. Wait until the transfer is complete. The module will then restart automatically.

Acknowledgements : Thanks to Émilie Gillet of Mutable Instruments for making the MIDI bootloader code open source:
<https://github.com/pichenettes/avr-midi-bootloader>

4. Miscellaneous

4.1. Disclaimer

No part of this document may be reproduced without the express permission of **ALYSEUM**.

All rights reserved, © 2011-2099 **ALYSEUM**.

The contents of this manual are subject to change without notice.

Brand names may be used and we hereby declare that we are using the name for the benefit of the brand owner, without any intention of infringement.

4.2. Warranty and repair

ALYSEUM warrants to the original purchaser that each of these products is free from defects in materials and workmanship for a period of two years from the date of purchase.

This warranty does not apply to products which have been repaired or modified by anyone other than **ALYSEUM**, or which have been subjected to electrostatic discharge, moisture, improper installation or use.

ALYSEUM assumes no responsibility for such occurrences under the terms of this warranty.

Before taking any action, please consult your dealer for further details or visit our support page at

<http://www.alyseum.com/support> .